



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
/ CH. LIST	-/--
/ TOOLS	
P. SIZE	
MEDIA P.	
TTX / MIX	
VOL+	VOL+
VOL -	VOL -
P+ / NEXT PAGE	P+
P - / PREV PAGE	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
/ / RETURN	BACK
DUAL / I – II	SLEEP
/ TV	TV/DTV
/ INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV. CH	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ PRE – CH	SHIFT+0
AD	SHIFT+
SUBT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

COMPATIBLE
DEVICES



Simply
Digital

Simply

Hotel TV

Safe



VISIT OUR
WEBSITE TO
DISCOVER